

Introduction

The ChipScope™ AXI Monitor core is designed to monitor and debug AXI interfaces. The core allows the probing of any signals going from a peripheral to the AXI interconnect. For example, the user can instantiate a monitor on a MicroBlaze™ processor instruction or data interface to observe all memory transactions going in and out of the processor.

Each monitor core works independently which allows the changing of trigger outputs to enable taking system-level measurements. By using the auxiliary trigger input and trigger output ports of a monitor core, multi-level triggering situations can be created to simplify complex system level measurements. For example, if a system consists of a master device operating at 100 MHz and a slave device operating at 50 MHz, the transfer of data going from one time domain to the next can be analyzed with the multi-tiered triggering functionality of monitor cores.

Moreover, with this system level measurement, not only can complex multi-time domain system level issues be debugged, but latency restrictions in a system can be analyzed as well.

Features

- Selectable data samples
- Generic Trigger/Data Unit with selectable width
- Auto-generated CDC file
- Multiple monitor support in single system through the use of trigger in and trigger out ports
- Allows multiple match units per trigger group
- Added functionality for more than one match unit per trigger group
- Adjustable counter size for triggers
- Selectable AXI Protocol Check monitoring for the AXI4 Memory Map and AXI4-Lite interfaces
- Supports connection to AXI3 Protocol Cores

LogiCORE IP Facts Table			
Core Specifics			
Supported Device Family ⁽¹⁾	Virtex®-7, Kintex™-7 ⁽⁶⁾ , Virtex-6 ⁽³⁾ , Spartan®-6 ⁽⁴⁾		
Supported User Interfaces	AXI4, AXI4-Lite, AXI4-Stream		
Resources Used			
Configuration ⁽⁵⁾	LUTs	Flip Flops	BRAMs
1	729	1141	9
2	1099	1451	12
3	865	1360	14
4	730	1155	5
5	1252	1663	6
6	853	1369	7
Provided with Core			
Documentation	Product Specification; UG029 ChipScope Pro Software and Cores User Guide; AMBA 4 AXI4, AXI4-Lite, and AXI4-Stream Protocol Assertions User Guide		
Design Files	VHDL		
Example Design	Not Provided		
Test Bench	Not Provided		
Constraints File	Not Provided		
Simulation Model	N/A		
Tested Design Tools ⁽²⁾			
Design Entry Tools	EDK		
Simulation	N/A		
Synthesis Tools	XST		
Support			

Provided by Xilinx @ www.xilinx.com/support

Notes:

1. For a list of supported derivative devices, see <http://www.xilinx.com/ise/embedded/ddsupport.htm>.
2. For the supported versions of the tools, see the [ISE Design Suite 13: Release Notes Guide](#).
3. For more information on the Virtex-6 devices, see the [DS150, Virtex-6 Family Overview](#).
4. For more information on the Spartan-6 devices, see the [DS160, Spartan-6 Family Overview](#).
5. For configuration details, see [Table 4](#).
6. For more information, see [DS180, 7 Series FPGAs Overview](#).

Functional Description

The AXI Monitor is used to debug top-level signals in a system that uses AXI4 protocol specifications by connecting it to an AXI Core using Xilinx® Platform Studio (XPS). When placed in an AXI system, the connection of the AXI Monitor probes between the AXI Interconnect and the AXI Core. The signal list is shown in Table 1. The user can monitor either AXI Memory Map signals through the MON_AXI bus interface or AXI Streaming signals through the MON_AXI_S bus interface (but not both) with a single AXI Monitor core. Communication with the ILA core is conducted using a connection to the JTAG port through the ICON core. See Figure 1.

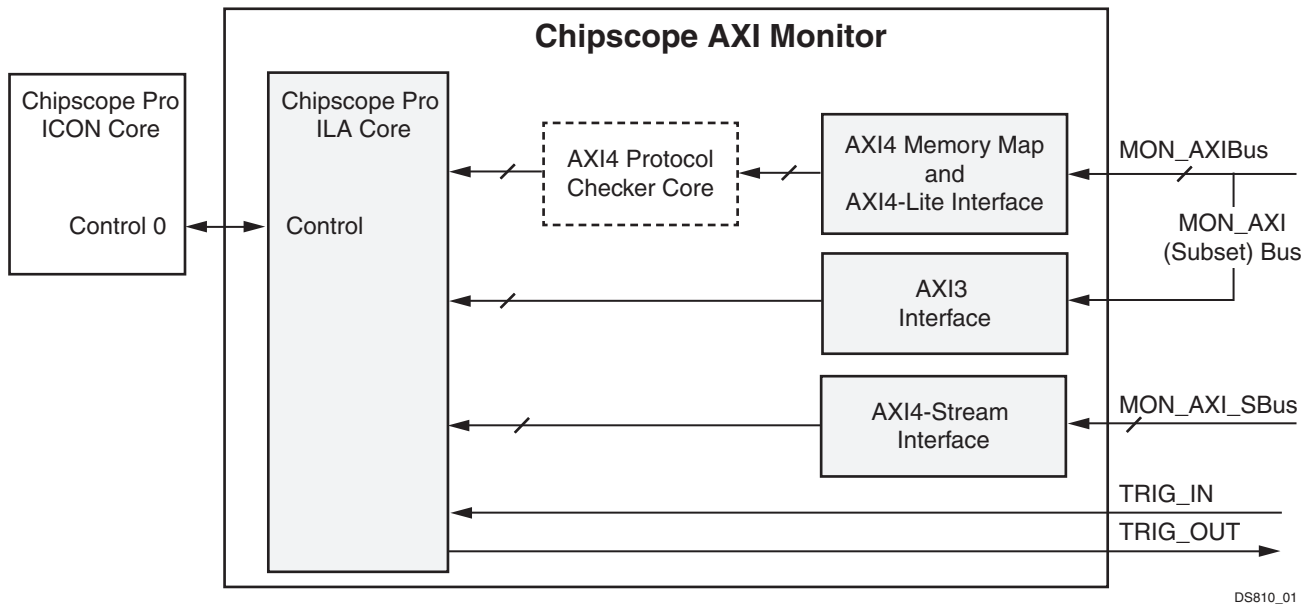


Figure 1: ChipScope AXI Monitor Block Diagram

The AXI Monitor is a wrapper for the ChipScope ILA core. It functions the same way as the ChipScope ILA, except that the wrapper creates a specific ILA for monitoring AXI signals by creating trigger groups designed for debugging purposes. When connected to a core in an AXI system, the user will specify which bus interface is to be connected (AXI4 Memory Map, AXI4-Streaming, AXI3), then supply values for parameters such as sample size and enable trigger out. These parameters are listed in Table 2.

After downloading the bitstream from the design to the FPGA, the ChipScope Analyzer Software tool is used to set up triggering and view waveforms from the system. The core generates a CDC file which is used by the ChipScope Analyzer tool to label the AXI signals with the appropriate header information and to define the trigger groups. More information on the ChipScope ILA or the ChipScope Analyzer can be found in the DS299 ChipScope ILA document and the UG029 ChipScope Analyzer document.

The AXI Monitor core is capable of using multiple AXI Monitors in a single AXI system to monitor multiple cores or can be used together by creating a trigger condition for the TRIG_OUT port from one monitor, then connecting it to the TRIG_IN port of another monitor. In XPS, when instantiating the AXI Monitor, connect the trigger out and trigger in pins on separate monitors, then use the ChipScope Analyzer to create the trigger condition on the specific monitor which will trigger the other to begin capturing data.

AXI Protocol Checker

The AXI Protocol Checker can be optionally included in the ChipScope AXI Monitor v3.01.a to check for AXI4-Memory Map and AXI4-Lite Protocol violations. The AXI Protocol Checker is designed around the ARM system verilog assertions which have been converted into synthesizable HDL. The AXI Protocol Checker supplies a flag to the ILA which can be triggered on when a violation of the protocol is detected.

Upon enabling the AXI Protocol Checker, the user will be given a choice as to which types of protocol checks are to be monitored (See Note 1). See Table 3 for the complete list of protocol checks or see the AMBA® AXI4, AXI4-Lite, and AXI4-Stream Protocol Assertions User Guide. When the user enables a group of protocol checks, that group of flags will be OR'ed, then the OR'ed signal will be connected to a trigger port of the ChipScope ILA core. If the C_MON_AXI_PC_TRACE parameter is set to "Store," the actual error flags will be connected to the DATA port of the ILA and will be able to be monitored. It is important to note that the user must trace the AXI signals that correspond to the protocol check to determine where a protocol violation occurs. Depending on the protocol check, the latency of the violation flag triggering data capture, can occur from 1 to 3 clock cycles after the violation has occurred. It is necessary to position the violation flag trigger inside the capture window to more than 3 samples in the position entry to ensure that the AXI protocol violation will be displayed.

- For v3.01.a of the ChipScope AXI Monitor core, the user will be able to enable the 39 Ready/Valid Handshake Checks only.

I/O Signals

The core I/O signals are listed and described in the subsequent table.

Table 1: I/O Signal Description

Signal Name	Interface	Signal Type	Init Status	Description
AXI4 Memory Map Signals				
CHIPSCOPE_ICON_CONTROL(35:0)	N/A	I/O		Control bus connection to the ICON core. Mandatory. Note: For XPS designs, the direction of this port is IN.
MON_AXI_TRIG_OUT	N/A	O		Trigger output port. (Optional)
MON_AXI_TRIG_IN	N/A	I		Trigger input port. (Optional)
MON_AXI_ACLK	AXI4	I		Clock
MON_AXI_ARESETN (1)	AXI4	I		Reset (active low)
MON_AXI_AWID(C_MON_AXI_ID_WIDTH-1:0)	AXI4	I		Write address channel transaction ID
MON_AXI_AWADDR(C_MON_AXI_ADDR_WIDTH-1:0)	AXI4	I		Write address channel address
MON_AXI_AWLEN(7:0)	AXI4	I		Write address burst length: Gives the exact number of transfers in a burst
MON_AXI_AWSIZE(2:0)	AXI4	I		Write address burst size: Indicates the size of each transfer in the burst
MON_AXI_AWBURST(1:0)	AXI4	I		Write address burst type
MON_AXI_AWLOCK	AXI4	I		Write address lock type
MON_AXI_AWCACHE(3:0)	AXI4	I		Write address cache type
MON_AXI_AWPROT(2:0)	AXI4	I		Write address protection type

Table 1: I/O Signal Description (Cont'd)

Signal Name	Interface	Signal Type	Init Status	Description
MON_AXI_AWQOS(3:0)	AXI4	I		Write address channel quality of service
MON_AXI_AWREGION(3:0)	AXI4	I		Selects address range within multirange slave
MON_AXI_AWVALID	AXI4	I		Write address valid: Indicates a valid write address and control information is available
MON_AXI_AWREADY	AXI4	I		Write address ready: slave is ready to accept address and control information
MON_AXI_AWUSER	AXI4	I		Write address channel USER signals
MON_AXI_WID(C_MON_AXI_ID_WIDTH-1:0)	AXI3	I		Write data channel transaction ID
MON_AXI_WDATA(C_MON_AXI_DATA_WIDTH-1:0)	AXI4	I		Write data bus
MON_AXI_WSTRB(C_MON_AXI_DATA_WIDTH/8)-1:0)	AXI4	I		Write strobes: Indicates which byte lanes have valid data. MON_AXI_WSTRB[n] corresponds to MON_AXI_WDATA[(8xn)+7:(8xn)]
MON_AXI_WLAST	AXI4	I		Indicates last write data word
MON_AXI_WVALID	AXI4	I		Write valid: Indicated valid write data and strobes are available. 1 = write data and strobes available 0 = write data and strobes not available
MON_AXI_WREADY	AXI4	I		Write ready: Indicates the slave can accept the write data 1= slave ready 0 = slave not ready
MON_AXI_WUSER	AXI4	I		Write data channel USER signals
MON_AXI_BID(C_MON_AXI_ID_WIDTH-1:0)	AXI4	I		Write response channel ID
MON_AXI_BRESP(1:0)	AXI4	I		Write response: Indicates the status of the write transaction
MON_AXI_BVALID	AXI4	I		Write response valid: Indicates a valid write response is available 1= write response available 0 = write response not available
MON_AXI_BREADY	AXI4	I		Write response ready: Indicates the master can accept the response information 1 = master ready 0 = master not ready
MON_AXI_BUSER	AXI4	I		Write response channel USER signals
MON_AXI_ARID(C_MON_AXI_ID_WIDTH-1:0)	AXI4	I		Read address ID
MON_AXI_ARADDR(C_MON_AXI_ADDR_WIDTH-1:0)	AXI4	I		Read address bus
MON_AXI_ARLEN(7:0)	AXI4	I		Read address burst length: Gives the exact number of transfers in a burst
MON_AXI_ARSIZE(2:0)	AXI4	I		Read address burst size: Indicates the size of each transfer in the burst

Table 1: I/O Signal Description (Cont'd)

Signal Name	Interface	Signal Type	Init Status	Description
MON_AXI_ARBURST(1:0)	AXI4	I		Read address burst type
MON_AXI_ARLOCK	AXI4	I		Read address lock type
MON_AXI_ARCACHE(3:0)	AXI4	I		Read address cache type
MON_AXI_ARPROT(2:0)	AXI4	I		Read address protection type
MON_AXI_ARQOS(3:0)	AXI4	I		Read address channel quality of service
MON_AXI_ARREGION(3:0)	AXI4	I		Selects address range within multirange slave
MON_AXI_ARVALID	AXI4	I		Read address valid: When HIGH this signal indicates the read address and control information is valid and will remain valid until MON_AXI_ARREADY is HIGH 1 = Address and control information valid 0 = Address and control information not valid
MON_AXI_ARREADY	AXI4	I		Address ready: Indicates the slave is ready to accept an address and associated control signals
MON_AXI_ARUSER	AXI4	I		Read address channel USER signals
MON_AXI_RID(C_MON_AXI_ID_WIDTH-1:0)	AXI4	I		Read data ID
MON_AXI_RDATA(C_MON_AXI_DATA_WIDTH-1:0)	AXI4	I		Read data bus
MON_AXI_RRESP(1:0)	AXI4	I		Read response: Indicates the status of the read transaction.
MON_AXI_RLAST	AXI4	I		Read last: Indicates last read data word
MON_AXI_RVALID	AXI4	I		Read data valid: Indicates the read data is available and the read transfer can complete 1 = read data available 0 = read data not available
MON_AXI_RREADY	AXI4	I		Read ready: Indicates the master can accept the read data and response information 1 = master ready 0 = master not ready
MON_AXI_RUSER	AXI4	I		Read data channel USER signals
AXI4-Stream Signals				
MON_AXI_S_TVALID	AXI4-Stream	I		AXI4-Stream valid
MON_AXI_S_TREADY	AXI4-Stream	I		AXI4-Stream ready
MON_AXI_S_TDATA(C_MON_AXI_S_TDATA_WIDTH-1:0)	AXI4-Stream	I		AXI4-Stream data bus
MON_AXI_S_TKEEP(C_MON_AXI_S_TDATA_WIDTH/8-1:0)	AXI4-Stream	I		AXI4-Stream byte qualifier
MON_AXI_S_TLAST	AXI4-Stream	I		AXI4-Stream last word
MON_AXI_S_TID(C_MON_AXI_S_TID_WIDTH-1:0)	AXI4-Stream	I		AXI4-Stream ID
MON_AXI_S_TDEST(C_MON_AXI_S_TDEST_WIDTH-1:0)	AXI4-Stream	I		AXI-Stream destination

Table 1: I/O Signal Description (Cont'd)

Signal Name	Interface	Signal Type	Init Status	Description
MON_AXI_S_TUSER(C_MON_AXI_S_TUSER_WIDTH-1:0)	AXI4-Stream	I		AXI-Stream user data

Notes:

1. If the ChipScope AXI Monitor is connected to a core that does not have the AXI4 ARESETN signal, it will be grounded. If an auxiliary reset signal is needed, manually connect this signal to the Trigger In port of the ChipScope AXI Monitor.

Design Parameters

The core design parameters are listed and described in the subsequent table.

Table 2: Design Parameters

Feature Description	Parameter Name	Allowable Values	Default Values	Type
User Specified AXI Implemented Parameters				
Active bus interface type	C_USE_INTERFACE	(0: AXI4/AXI4-Lite, 1: AXI4-Stream, 2: AXI3 Memory map)	0	integer
Sets number of data samples	C_NUM_DATA_SAMPLES	(1024, 2048, 4096, 8192, 16384, 32768, 65536, 131072)	1048	integer
Maximum number of sequencer levels	C_MAX_SEQUENCER_LEVELS	2	(1:16)	integer
Enable trigger in	C_USE_TRIG_IN	(0,1)	0	integer
Trigger input width	C_TRIG_IN_WIDTH	(1:255)	1	integer
AWLEN/ARLEN Bus Width	C_MON_AXI_BURST_LENGTH	(4,8)	8	integer
AWLOCK/ARLOCK Bus Width	C_MON_AXI_LOCK_LENGTH	(1,2)	1	integer
ARADDR Number of Match Units	C_MON_AXI_ARADDR_NUM_OF_MATCH	(0:4)	1	integer
ARADDRCONTROL Number of Match Units	C_MON_AXI_ARADDRCONTROL_NUM_OF_MATCH	(0:4)	1	integer
AWADDR Number of Match Units	C_MON_AXI_AWADDR_NUM_OF_MATCH	(0:4)	1	integer
AWADDRCONTROL Number of Match Units	C_MON_AXI_AWADDRCONTROL_NUM_OF_MATCH	(0:4)	1	integer
BRESP Number of Match Units	C_MON_AXI_BRESP_NUM_OF_MATCH	(0:4)	1	integer
GLOBAL Number of Match Units	C_MON_AXI_GLOBAL_NUM_OF_MATCH	(0:4)	1	integer
RDATA Number of Match Units	C_MON_AXI_RDATA_NUM_OF_MATCH	(0:4)	1	integer
RDATACONTROL Number of Match Units	C_MON_AXI_RDATACONTROL_NUM_OF_MATCH	(0:4)	1	integer
WDATA Number of Match Units	C_MON_AXI_WDATA_NUM_OF_MATCH	(0:4)	1	integer
WDATACONTROL Number of Match Units	C_MON_AXI_WDATACONTROL_NUM_OF_MATCH	(0:4)	1	integer

Table 2: Design Parameters (Cont'd)

Feature Description	Parameter Name	Allowable Values	Default Values	Type
AWUSER Number of Match Units	C_MON_AXI_AWUSER_NUM_OF_MATCH	(0:4)	0	integer
WUSER Number of Match Units	C_MON_AXI_WUSER_NUM_OF_MATCH	(0:4)	0	integer
BUSER Number of Match Units	C_MON_AXI_BUSER_NUM_OF_MATCH	(0:4)	0	integer
ARUSER Number of Match Units	C_MON_AXI_ARUSER_NUM_OF_MATCH	(0:4)	0	integer
RUSER Number of Match Units	C_MON_AXI_RUSER_NUM_OF_MATCH	(0:4)	0	integer
TCONTROL Number of Match Units	C_MON_AXI_S_TCONTROL_NUM_OF_MATCH	(0:4)	0	integer
TDATA Number of Match Units	C_MON_AXI_S_TDATA_NUM_OF_MATCH	(0:4)	0	integer
TUSER Number of Match Units	C_MON_AXI_S_TUSER_NUM_OF_MATCH	(0:4)	0	integer
ARADDR Match Type	C_MON_AXI_ARADDR_MATCH_TYPE	(basic=basic, basic with edges=basic with edges, extended=extended, extended with edges=extended with edges, range=range, range with edges=range with edges)	range with edges	string
ARADDRCONTROL Match Type	C_MON_AXI_ARADDRCONTROL_MATCH_TYPE	(basic=basic, basic with edges=basic with edges, extended=extended, extended with edges=extended with edges, range=range, range with edges=range with edges)	basic with edges	string
AWADDR Match Type	C_MON_AXI_AWADDR_MATCH_TYPE	(basic=basic, basic with edges=basic with edges, extended=extended, extended with edges=extended with edges, range=range, range with edges=range with edges)	range with edges	string
AWADDRCONTROL Match Type	C_MON_AXI_AWADDRCONTROL_MATCH_TYPE	(basic=basic, basic with edges=basic with edges, extended=extended, extended with edges=extended with edges, range=range, range with edges=range with edges)	basic with edges	string

Table 2: Design Parameters (Cont'd)

Feature Description	Parameter Name	Allowable Values	Default Values	Type
BRESP Match Type	C_MON_AXI_BRESP_MATCH_TYPE	(basic=basic, basic with edges=basic with edges, extended=extended, extended with edges=extended with edges, range=range, range with edges=range with edges)	basic with edges	string
GLOBAL Match Type	C_MON_AXI_GLOBAL_MATCH_TYPE	(basic=basic, basic with edges=basic with edges, extended=extended, extended with edges=extended with edges, range=range, range with edges=range with edges)	basic with edges	string
RDATA Match Type	C_MON_AXI_RDATA_MATCH_TYPE	(basic=basic, basic with edges=basic with edges, extended=extended, extended with edges=extended with edges, range=range, range with edges=range with edges)	extended with edges	string
RDATACONTROL Match Type	C_MON_AXI_RDATACONTROL_MATCH_TYPE	(basic=basic, basic with edges=basic with edges, extended=extended, extended with edges=extended with edges, range=range, range with edges=range with edges)	basic with edges	string
WDATA Match Type	C_MON_AXI_WDATA_MATCH_TYPE	(basic=basic, basic with edges=basic with edges, extended=extended, extended with edges=extended with edges, range=range, range with edges=range with edges)	extended with edges	string
WDATACONTROL Match Type	C_MON_AXI_WDATACONTROL_MATCH_TYPE	(basic=basic, basic with edges=basic with edges, extended=extended, extended with edges=extended with edges, range=range, range with edges=range with edges)	basic with edges	string
AWUSER Match Type	C_MON_AXI_AWUSER_MATCH_TYPE	(basic=basic, basic with edges=basic with edges, extended=extended, extended with edges=extended with edges, range=range, range with edges=range with edges)	basic with edges	string

Table 2: Design Parameters (Cont'd)

Feature Description	Parameter Name	Allowable Values	Default Values	Type
WUSER Match Type	C_MON_AXI_WUSER_MATCH_TYPE	(basic=basic, basic with edges=basic with edges, extended=extended, extended with edges=extended with edges, range=range, range with edges=range with edges)	basic with edges	string
BUSER Match Type	C_MON_AXI_BUSER_MATCH_TYPE	(basic=basic, basic with edges=basic with edges, extended=extended, extended with edges=extended with edges, range=range, range with edges=range with edges)	basic with edges	string
ARUSER Match Type	C_MON_AXI_ARUSER_MATCH_TYPE	(basic=basic, basic with edges=basic with edges, extended=extended, extended with edges=extended with edges, range=range, range with edges=range with edges)	basic with edges	string
RUSER Match Type	C_MON_AXI_RUSER_MATCH_TYPE	(basic=basic, basic with edges=basic with edges, extended=extended, extended with edges=extended with edges, range=range, range with edges=range with edges)	basic with edges	string
TCONTROL Match Type	C_MON_AXI_S_TCONTROL_MATCH_TYPE	(basic=basic, basic with edges=basic with edges, extended=extended, extended with edges=extended with edges, range=range, range with edges=range with edges)	basic with edges	string
TDATA Match Type	C_MON_AXI_S_TDATA_MATCH_TYPE	(basic=basic, basic with edges=basic with edges, extended=extended, extended with edges=extended with edges, range=range, range with edges=range with edges)	basic with edges	string
TUSER Match Type	C_MON_AXI_S_TUSER_MATCH_TYPE	(basic=basic, basic with edges=basic with edges, extended=extended, extended with edges=extended with edges, range=range, range with edges=range with edges)	basic with edges	string

Table 2: Design Parameters (Cont'd)

Feature Description	Parameter Name	Allowable Values	Default Values	Type
ARADDR Trigger Counter Width	C_MON_AXI_ARADDR_TRIG_COUNT_WIDTH	(1:32)	1	integer
ARADDRCONTROL Trigger Counter Width	C_MON_AXI_ARADDRCONTROL_TRIG_COUNT_WIDTH	(1:32)	1	integer
AWADDR Trigger Counter Width	C_MON_AXI_AWADDR_TRIG_COUNT_WIDTH	(1:32)	1	integer
AWADDRCONTROL Trigger Counter Width	C_MON_AXI_AWADDRCONTROL_TRIG_COUNT_WIDTH	(1:32)	1	integer
BRESP Trigger Counter Width	C_MON_AXI_BRESP_TRIG_COUNT_WIDTH	(1:32)	1	integer
GLOBAL Trigger Counter Width	C_MON_AXI_GLOBAL_TRIG_COUNT_WIDTH	(1:32)	1	integer
RDATA Trigger Counter Width	C_MON_AXI_RDATA_TRIG_COUNT_WIDTH	(1:32)	1	integer
RDATACONTROL Trigger Counter Width	C_MON_AXI_RDATACONTROL_TRIG_COUNT_WIDTH	(1:32)	1	integer
WDATA Trigger Counter Width	C_MON_AXI_WDATA_TRIG_COUNT_WIDTH	(1:32)	1	integer
WDATACONTROL Trigger Counter Width	C_MON_AXI_WDATACONTROL_TRIG_COUNT_WIDTH	(1:32)	1	integer
AWUSER Trigger Counter Width	C_MON_AXI_AWUSER_TRIG_COUNT_WIDTH	(1:32)	1	integer
WUSER Trigger Counter Width	C_MON_AXI_WUSER_TRIG_COUNT_WIDTH	(1:32)	1	integer
BUSER Trigger Counter Width	C_MON_AXI_BUSER_TRIG_COUNT_WIDTH	(1:32)	1	integer
ARUSER Trigger Counter Width	C_MON_AXI_ARUSER_TRIG_COUNT_WIDTH	(1:32)	1	integer
RUSER Trigger Counter Width	C_MON_AXI_RUSER_TRIG_COUNT_WIDTH	(1:32)	1	integer
TCONTROL Trigger Counter Width	C_MON_AXI_S_TCONTROL_TRIG_COUNT_WIDTH	(1:32)	1	integer
TDATA Trigger Counter Width	C_MON_AXI_S_TDATA_TRIG_COUNT_WIDTH	(1:32)	1	integer
TUSER Trigger Counter Width	C_MON_AXI_S_TUSER_TRIG_COUNT_WIDTH	(1:32)	1	integer
GLOBAL Trigger Store/Trace to ILA Data Port	C_MON_AXI_GLOBAL_TRACE	(0: Do Not Store, 1: Store)	1	string
AWADDRCONTROL Trigger Store/Trace to ILA Data Port	C_MON_AXI_AWADDRCONTROL_TRACE	(0: Do Not Store, 1: Store)	1	string
AWADDR Trigger Store/Trace to ILA Data Port	C_MON_AXI_AWADDR_TRACE	(0: Do Not Store, 1: Store)	1	string
WDATACONTROL Trigger Store/Trace to ILA Data Port	C_MON_AXI_WDATACONTROL_TRACE	(0: Do Not Store, 1: Store)	1	string
WDATA Trigger Store/Trace to ILA Data Port	C_MON_AXI_WDATA_TRACE	(0: Do Not Store, 1: Store)	1	string

Table 2: Design Parameters (Cont'd)

Feature Description	Parameter Name	Allowable Values	Default Values	Type
BRESP Trigger Store/Trace to ILA Data Port	C_MON_AXI_BRESP_TRACE	(0: Do Not Store, 1: Store)	1	string
ARADDRCONTROL Trigger Store/Trace to ILA Data Port	C_MON_AXI_ARADDRCONTROL_TRACE	(0: Do Not Store, 1: Store)	1	string
ARADDR Trigger Store/Trace to ILA Data Port	C_MON_AXI_ARADDR_TRACE	(0: Do Not Store, 1: Store)	1	string
RDATACONTROL Trigger Store/Trace to ILA Data Port	C_MON_AXI_RDATACONTROL_TRACE	(0: Do Not Store, 1: Store)	1	string
RDATA Trigger Store/Trace to ILA Data Port	C_MON_AXI_RDATA_TRACE	(0: Do Not Store, 1: Store)	1	string
AWUSER Trigger Store/Trace to ILA Data Port	C_MON_AXI_AWUSER_TRACE	(0: Do Not Store, 1: Store)	0	string
WUSER Trigger Store/Trace to ILA Data Port	C_MON_AXI_WUSER_TRACE	(0: Do Not Store, 1: Store)	0	string
BUSER Trigger Store/Trace to ILA Data Port	C_MON_AXI_BUSER_TRACE	(0: Do Not Store, 1: Store)	0	string
ARUSER Trigger Store/Trace to ILA Data Port	C_MON_AXI_ARUSER_TRACE	(0: Do Not Store, 1: Store)	0	string
RUSER Trigger Store/Trace to ILA Data Port	C_MON_AXI_RUSER_TRACE	(0: Do Not Store, 1: Store)	0	string
TCONTROL Trigger Store/Trace to ILA Data Port	C_MON_AXI_S_TCONTROL_TRACE	(0: Do Not Store, 1: Store)	1	string
TDATA Trigger Store/Trace to ILA Data Port	C_MON_AXI_S_TDATA_TRACE	(0: Do Not Store, 1: Store)	1	string
TUSER Trigger Store/Trace to ILA Data Port	C_MON_AXI_S_TUSER_TRACE	(0: Do Not Store, 1: Store)	0	string
System Specified AXI Implemented Parameters				
Device family	C_FAMILY	virtex6, spartan6	spartan6	string
Device/part	C_DEVICE		xc6slx45t	string
Device package	C_PACKAGE		fgg484	string
Device speed grade	C_SPEEDGRADE	(-1, -2, -3)	-2	string
AXI memory map BUSIF name	C_MON_AXI_PROTOCOL	axi4, axi4-lite, axi3	axi4	string
AXI stream BUSIF name	C_MON_AXI_S_PROTOCOL		generic	string
System supports threads	C_MON_AXI_SUPPORTS_THREADS	(0,1)	0	integer
AXI memory map ID width	C_MON_AXI_ID_WIDTH		1	integer
AXI stream ID width	C_MON_AXI_S_TID_WIDTH		1	integer
AXI memory map address width	C_MON_AXI_ADDR_WIDTH	32	32	integer
AXI stream TDEST width	C_MON_AXI_S_TDEST_WIDTH	(0:32)	32	integer
AXI4 memory map data width	C_MON_AXI_DATA_WIDTH	(32, 64, 128, 256)	32	integer
AXI stream data width	C_MON_AXI_S_TDATA_WIDTH	(32, 64, 128, 256)	32	integer
Write address USER port bus width	C_MON_AXI_AWUSER_WIDTH	(1:256) ⁽¹⁾	1	integer

Table 2: Design Parameters (Cont'd)

Feature Description	Parameter Name	Allowable Values	Default Values	Type
Write data USER port bus width	C_MON_AXI_WUSER_WIDTH	(1:256) ⁽¹⁾	1	integer
Write response USER port bus width	C_MON_AXI_BUSER_WIDTH	(1:256) ⁽¹⁾	1	integer
Read address USER port bus width	C_MON_AXI_ARUSER_WIDTH	(1:256) ⁽¹⁾	1	integer
Read data USER port bus width	C_MON_AXI_RUSER_WIDTH	(1:256) ⁽¹⁾	1	integer
Streaming USER port bus width	C_MON_AXI_S_TUSER_WIDTH	(1:256) ⁽¹⁾	1	integer
System supports read operations	C_MON_AXI_SUPPORTS_READ	(0,1)	1	integer
System supports write operations	C_MON_AXI_SUPPORTS_WRITE	(0,1)	1	integer
AXI Protocol Checker Parameters				
Protocol Checker Number of Match Units	C_MON_AXI_PC_NUM_OF_MATCH	(0:1)	0	integer
Protocol Checker Match Type	C_MON_AXI_PC_MATCH_TYPE	(basic=basic, basic with edges=basic with edges, extended=extended, extended with edges=extended with edges, range=range, range with edges=range with edges)	basic with edges	string
Protocol Checker Trigger Counter Width	C_MON_AXI_PC_TRIG_COUNT_WIDTH	(1:32)	1	integer
Protocol Checker Trigger Store/Trace to ILA Data Port	C_MON_AXI_PC_TRACE	(0: Do Not Store, 1: Store)	0	string
Handshake Protocol Checks Enable	C_MON_AXI_EN_HANDSHAKE_CHECKS	(0,1)	0	integer
Complex Protocol Checks Enable	C_MON_AXI_EN_COMPLEX_CHECKS	(0,1)	0	integer
Exclusive Access Protocol Checks Enable	C_MON_AXI_EN_EXCLUSIVE_CHECKS	(0,1)	0	integer
Ignore Protocol Checks Enable	C_MON_AXI_EN_IGNORE_CHECKS	(0,1)	0	integer
Illegal Value Protocol Checks Enable	C_MON_AXI_EN_ILLEGAL_VALUE_CHECKS	(0,1)	0	integer
Reset Protocol Checks Enable	C_MON_AXI_EN_RESET_CHECKS	(0,1)	0	integer
Auxiliary Protocol Checks Enable	C_MON_AXI_EN_AUX_CHECKS	(0,1)	0	integer
ARM Recommended Max Wait Protocol Checks Enable	C_MON_AXI_EN_ARM_REC_WAIT_CHECKS	(0,1)	0	integer
ARM Recommended Protocol Checks Enable	C_MON_AXI_EN_ARM_REC_ONLY_CHECKS	(0,1)	0	integer

Table 2: Design Parameters (Cont'd)

Feature Description	Parameter Name	Allowable Values	Default Values	Type
Protocol Checker Error Bus Width	C_MON_AXI_PC_ERROR_COUNT	95	95	integer
Size of FIFO for Storing Outstanding Read Bursts	C_MON_AXI_PC_MAXRBURST	(2:32)	16	integer
Size of FIFO for Storing Outstanding Read Bursts	C_MON_AXI_PC_MAXWBURST	(2:32)	16	integer
Width of Exclusive Access Monitor	C_MON_AXI_PC_EXMON_WIDTH	(1:32)	1	integer

Notes:

- These parameters are set by the XPS tool automatically after the ChipScope AXI Monitor is connected to another Xilinx AXI IP core. If any port(s) for which these parameters set the width are not used, retain the default widths and the XPS tool will ground the port(s). Do not enter a value of 0 in the MHS file to disable the default value.

AXI Protocol Checks and Descriptions

The AXI Protocol Checks are listed and described in the subsequent table.

Table 3: AXI Protocol Checks and Descriptions

Name of Protocol Check	Type	Description
AXI4_ERRM_AWADDR_STABLE	Ready/Valid Handshake Checks	AWADDR must remain stable when AWVALID is asserted and AWREADY low
AXI4_ERRM_AWBURST_STABLE	Ready/Valid Handshake Checks	AWBURST must remain stable when AWVALID is asserted and AWREADY low
AXI4_ERRM_AWCACHE_STABLE	Ready/Valid Handshake Checks	AWCACHE must remain stable when AWVALID is asserted and AWREADY low
AXI4_ERRM_AWID_STABLE	Ready/Valid Handshake Checks	AWID must remain stable when AWVALID is asserted and AWREADY low
AXI4_ERRM_AWLEN_STABLE	Ready/Valid Handshake Checks	AWLEN must remain stable when AWVALID is asserted and AWREADY low
AXI4_ERRM_AWLOCK_STABLE	Ready/Valid Handshake Checks	AWLOCK must remain stable when AWVALID is asserted and AWREADY low
AXI4_ERRM_AWPROT_STABLE	Ready/Valid Handshake Checks	AWPROT must remain stable when AWVALID is asserted and AWREADY low
AXI4_ERRM_AWSIZE_STABLE	Ready/Valid Handshake Checks	AWSIZE must remain stable when AWVALID is asserted and AWREADY low
AXI4_ERRM_AWQOS_STABLE	Ready/Valid Handshake Checks	AWQOS must remain stable when AWVALID is asserted and AWREADY low
AXI4_ERRM_AWREGION_STABLE	Ready/Valid Handshake Checks	AWREGION must remain stable when ARVALID is asserted and AWREADY low
AXI4_ERRM_AWVALID_STABLE	Ready/Valid Handshake Checks	Once AWVALID is asserted, it must remain asserted until AWREADY is high
AXI4_ERRM_WDATA_STABLE	Ready/Valid Handshake Checks	WDATA must remain stable when WVALID is asserted and WREADY low
AXI4_ERRM_WLAST_STABLE	Ready/Valid Handshake Checks	WLAST must remain stable when WVALID is asserted and WREADY low
AXI4_ERRM_WSTRB_STABLE	Ready/Valid Handshake Checks	WSTRB must remain stable when WVALID is asserted and WREADY low

Table 3: AXI Protocol Checks and Descriptions (Cont'd)

Name of Protocol Check	Type	Description
AXI4_ERRM_WVALID_STABLE	Ready/Valid Handshake Checks	Once WVALID is asserted, it must remain asserted until WREADY is high
AXI4_ERRS_BID_STABLE	Ready/Valid Handshake Checks	BID must remain stable when BVALID is asserted and BREADY low
AXI4_ERRS_BRESP_STABLE	Ready/Valid Handshake Checks	BRESP must remain stable when BVALID is asserted and BREADY low
AXI4_ERRS_BVALID_STABLE	Ready/Valid Handshake Checks	Once BVALID is asserted, it must remain asserted until BREADY is high
AXI4_ERRM_ARADDR_STABLE	Ready/Valid Handshake Checks	ARADDR must remain stable when ARVALID is asserted and ARREADY low
AXI4_ERRM_ARBURST_STABLE	Ready/Valid Handshake Checks	ARBURST must remain stable when ARVALID is asserted and ARREADY low
AXI4_ERRM_ARCACHE_STABLE	Ready/Valid Handshake Checks	ARCACHE must remain stable when ARVALID is asserted and ARREADY low
AXI4_ERRM_ARID_STABLE	Ready/Valid Handshake Checks	ARID must remain stable when ARVALID is asserted and ARREADY low
AXI4_ERRM_ARLEN_STABLE	Ready/Valid Handshake Checks	ARLEN must remain stable when ARVALID is asserted and ARREADY low.
AXI4_ERRM_ARLOCK_STABLE	Ready/Valid Handshake Checks	ARLOCK must remain stable when ARVALID is asserted and ARREADY low
AXI4_ERRM_ARPROT_STABLE	Ready/Valid Handshake Checks	ARPROT must remain stable when ARVALID is asserted and ARREADY low
AXI4_ERRM_ARSIZE_STABLE	Ready/Valid Handshake Checks	ARSIZE must remain stable when ARVALID is asserted and ARREADY low
AXI4_ERRM_ARQOS_STABLE	Ready/Valid Handshake Checks	ARQOS must remain stable when ARVALID is asserted and ARREADY low
AXI4_ERRM_ARREGION_STABLE	Ready/Valid Handshake Checks	ARREGION must remain stable when ARVALID is asserted and ARREADY low
AXI4_ERRM_ARVALID_STABLE	Ready/Valid Handshake Checks	Once ARVALID is asserted, it must remain asserted until ARREADY is high
AXI4_ERRS_RDATA_STABLE	Ready/Valid Handshake Checks	RDATA must remain stable when RVALID is asserted and RREADY low
AXI4_ERRS_RID_STABLE	Ready/Valid Handshake Checks	RID must remain stable when RVALID is asserted and RREADY low
AXI4_ERRS_RLAST_STABLE	Ready/Valid Handshake Checks	RLAST must remain stable when RVALID is asserted and RREADY low
AXI4_ERRS_RRESP_STABLE	Ready/Valid Handshake Checks	RRESP must remain stable when RVALID is asserted and RREADY low
AXI4_ERRS_RVALID_STABLE	Ready/Valid Handshake Checks	Once RVALID is asserted, it must remain asserted until RREADY is high
AXI4_ERRM_AWUSER_STABLE	Ready/Valid Handshake Checks and ARM Recommended Checks	AWUSER must remain stable when AWVALID is asserted and AWREADY low
AXI4_ERRM_WUSER_STABLE	Ready/Valid Handshake Checks	WUSER must remain stable when WVALID is asserted and WREADY low
AXI4_ERRS_BUSER_STABLE	Ready/Valid Handshake Checks	BUSER must remain stable when BVALID is asserted and BREADY low

Table 3: AXI Protocol Checks and Descriptions (Cont'd)

Name of Protocol Check	Type	Description
AXI4_ERRM_ARUSER_STABLE	Ready/Valid Handshake Checks	ARUSER must remain stable when ARVALID is asserted and ARREADY low
AXI4_ERRS_RUSER_STABLE	Ready/Valid Handshake Checks	RUSER must remain stable when RVALID is asserted and RREADY low

Device Utilization and Performance Benchmarks

The device utilization will vary based on the parameter combinations set by the system and user.

Configuration

The core configuration details are listed and described in the subsequent table.

Table 4: Configuration Details

Configuration	Device	System Setup
1	xc6slx45t-fgg484-3	ChipScope AXI Monitor enabled; AXI Protocol Checker disabled; AXI4 Memory Map; 10 trigger groups enabled; Data Width of 32; Sample depth of 1024
2	xc6slx45t-fgg484-3	ChipScope AXI Monitor enabled; AXI Protocol Checker with 50% of checks enabled; AXI4 Memory Map; 10 trigger groups enabled; Data Width of 32; Sample depth of 1024
3	xc6slx45t-fgg484-3	ChipScope AXI Monitor enabled; AXI Protocol Checker with 100% of checks enabled; AXI4 Memory Map; 10 trigger groups enabled; Data Width of 32; Sample depth of 1024
4	xc6vlx240t-ff1156-1	ChipScope AXI Monitor enabled; AXI Protocol Checker disabled; AXI4 Memory Map; 10 trigger groups enabled; Data Width of 32; Sample depth of 1024
5	xc6vlx240t-ff1156-1	ChipScope AXI Monitor enabled; AXI Protocol Checker with 50% of checks enabled; AXI4 Memory Map; 10 trigger groups enabled; Data Width of 32; Sample depth of 1024
6	xc6vlx240t-ff1156-1	ChipScope AXI Monitor enabled; AXI Protocol Checker with 100% of checks enabled; AXI4 Memory Map; 10 trigger groups enabled; Data Width of 32; Sample depth of 1024

References

- More information on the ChipScope Pro software and cores is available in the *Software and Cores User Guide*, located at <http://www.xilinx.com/support/documentation>.
- Information about hardware debugging using ChipScope Pro in EDK is available in the Platform Studio 12 online help, located at <http://www.xilinx.com/support/documentation>.
- Information about hardware debugging using ChipScope Pro in System Generator for DSP is available in the *Xilinx System Generator for DSP User Guide*, located at <http://www.xilinx.com/support/documentation>.

Support

Xilinx provides technical support for this LogiCORE™ IP product when used as described in the product documentation. Xilinx cannot guarantee timing, functionality, or support of product if implemented in devices that are not defined in the documentation, if customized beyond that allowed in the product documentation, or if changes are made to any section of the design labeled *DO NOT MODIFY*.

Ordering Information

This Xilinx LogiCORE IP module is provided at no additional cost with the Xilinx ISE® Design Suite Embedded Edition software under the terms of the Xilinx [End User License](#). The core is generated using the Xilinx ISE Embedded Edition software (EDK).

Information about this and other Xilinx LogiCORE IP modules is available at the [Xilinx Intellectual Property](#) page. For information on pricing and availability of other Xilinx LogiCORE modules and software, please contact your local Xilinx [sales representative](#).

Revision History

The following table shows the revision history for this document:

Date	Version	Description of Revisions
9/21/10	1.0	Initial Xilinx release
12/14/10	1.1	Added functionality to support AXI4-Lite and AXI4-Stream signals
3/1/11	1.2	Updated to v2.00a for 13.1 release; added functionality for increased user customization
6/22/11	1.3	Updated to v3.00a for 13.2 release; added AXI Protocol Checker and AXI3 support
10/19/11	1.4	Updated to v3.01.a for 13.3 release; added Virtex-7 FPGA support

Notice of Disclaimer

The information disclosed to you hereunder (the "Materials") is provided solely for the selection and use of Xilinx products. To the maximum extent permitted by applicable law: (1) Materials are made available "AS IS" and with all faults, Xilinx hereby DISCLAIMS ALL WARRANTIES AND CONDITIONS, EXPRESS, IMPLIED, OR STATUTORY, INCLUDING BUT NOT LIMITED TO WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT, OR FITNESS FOR ANY PARTICULAR PURPOSE; and (2) Xilinx shall not be liable (whether in contract or tort, including negligence, or under any other theory of liability) for any loss or damage of any kind or nature related to, arising under, or in connection with, the Materials (including your use of the Materials), including for any direct, indirect, special, incidental, or consequential loss or damage (including loss of data, profits, goodwill, or any type of loss or damage suffered as a result of any action brought by a third party) even if such damage or loss was reasonably foreseeable or Xilinx had been advised of the possibility of the same. Xilinx assumes no obligation to correct any errors contained in the Materials or to notify you of updates to the Materials or to product specifications. You may not reproduce, modify, distribute, or publicly display the Materials without prior written consent. Certain products are subject to the terms and conditions of the Limited Warranties which can be viewed at <http://www.xilinx.com/warranty.htm>; IP cores may be subject to warranty and support terms contained in a license issued to you by Xilinx. Xilinx products are not designed or intended to be fail-safe or for use in any application requiring fail-safe performance; you assume sole risk and liability for use of Xilinx products in Critical Applications: <http://www.xilinx.com/warranty.htm#critapps>.