

# **Ternary Content Addressable Memory (TCAM) Search IP for SDNet**

## ***SmartCORE IP Product Guide***

**PG190 (v1.0) November 10, 2017**

# Table of Contents

## Chapter 1: Overview

Licensing and Ordering .....	6
------------------------------	---

## Chapter 2: Product Specification

Performance .....	8
Resource Utilization .....	10
Port Descriptions .....	10
Register Space .....	13

## Chapter 3: Designing with the Core

General Design Guidelines .....	16
Clocking .....	16
Resets .....	16
Protocol Description .....	17

## Chapter 4: Design Flow Steps

Configuration .....	19
Constraining the Core .....	20
Simulation .....	21
Synthesis and Implementation .....	21

## Appendix A: Upgrading

## Appendix B: Debugging

Finding Help on Xilinx.com .....	23
Debug Tools .....	24
Hardware Debug .....	24
Interface Debug .....	25

## Appendix C: Application Software Development

Data Structures .....	27
Device Initialization .....	28
Device Management API Functions .....	31

## Appendix D: Additional Resources and Legal Notices

Xilinx Resources .....	34
Documentation Navigator and Design Hubs .....	34
References .....	35
Revision History .....	35
Notice of Disclaimer .....	36

## Introduction

The TCAM SmartCORE™ IP is a ternary content-addressable memory that stores {data, mask, value} entries with arbitrary data, mask and value bit strings. The mask is used to mark certain bits in the key field as “don’t care”. The retrieval of ‘value’ is based on a ternary match of ‘key’ with {data, mask}.

## Features

- Associative array containing arbitrary {key, mask, value} sets
- Ternary match key lookup returns hit/miss result and associated data and address on hit
- High throughput: one lookup per clock cycle.
- One- and two-range comparisons in each rule supported efficiently without rule expansion
- Scalable, supporting a wide range of key, mask, and value field widths
- Supports both distributed RAM and block RAM implementations

SmartCORE IP Facts Table	
Core Specifics	
Supported Device Family	Kintex® UltraScale™ Virtex® UltraScale Kintex UltraScale+™ Virtex UltraScale+ Zynq® UltraScale+ MPSoC Kintex-7, Virtex-7 Spartan®-7
Supported User Interfaces	Lookup and AXI4-Lite Interfaces
Resources	See <a href="#">Table 2-3</a> .
Provided with Core	
Design Files	Encrypted register transfer level (RTL) or Netlist
Example Design	Not Provided
Test Bench	System Verilog
Constraints File	Not Provided
Simulation Model	Verilog
Supported S/W Driver <sup>(1)</sup>	Standalone
Tested Design Flows	
Design Entry	SDNet <sup>(2)</sup>
Simulation	Vivado® Simulator Mentor Graphics Questa Advanced Simulator
Synthesis	Not Applicable
Support	
Provided by Xilinx at the <a href="#">Xilinx Support web page</a>	

### Notes:

1. Stand-alone driver details can be found in the software development kit (SDK) directory (<install\_directory>/SDK/<release>/data/embeddedsw/doc/xilinx\_drivers.htm). Linux OS and driver support information is available from the [Xilinx Wiki page](#).
2. See the *SDNet Packet Processor User Guide* (UG1012) [Ref 4].

## Overview

The TCAM stores {data, mask, value} entries in RAM which can be either distributed RAM or block RAM, based on the configuration. The TCAM provides efficient use of Xilinx® FPGA resources, in contrast with basic TCAM implementations that store the keys in flip-flops and use logic resources for parallel key comparison.

The Lookup interface of the TCAM receives a lookup key and outputs a result that contains a match flag indicating whether the key matches any entry in the TCAM. If any TCAM entry is matched, the address and the associated value of the entry with the highest priority is output. The address of an entry in the TCAM determines its priority, i.e., an entry with a lower address has a higher priority than one with a higher address. The TCAM is pipelined so that it can process a lookup request every clock cycle.

In addition to ternary matching, the TCAM supports range comparisons, e.g., for TCP/UDP port range checking. Up to two sub-fields of the key can optionally be designated for numerical range checking ([min:max]), as opposed to the data/mask matching. The position and the width of these sub-fields of the key are statically configured according to user specifications.

The rule entries are read and written using a set of high-level Application Programming Interface (API) functions. The API functions are written in C that is compliant with the ISO/IEC 9899:1999 standard, and delivered as part of the IP. The API encapsulates the details of configuration register access and lookup/update scheduling semantics and provides you with a simple and efficient interface. An AXI4-Lite interface provides a communication link between the API software and the hardware configuration and status registers.

Examples of rules that can be programmed directly into the TCAM using the provided API functions are shown in [Table 1-1](#).

**Table 1-1: Example of TCAM Rules**

IPv4 Src Addr/Mask	IPv4 Dst Addr/Mask	TCP Src Port	TCP Dst Port	Protocol/ Mask	Value
198.238.184.78/32	142.205.117.12/30	0:65535	0:65535	0x00/0x00	0
0.0.0.0/0	198.238.186.122/32	0:65535	25:25	0x11/0xFF	2
0.0.0.0/0	198.238.190.245/32	0:65535	8080:8080	0x11/0xFF	3
0.0.0.0/0	198.238.190.174/32	0:65535	67:67	0x11/0xFF	0

The rules in the table consist of five fields as follows:

- IPv4 Source Address and mask
- IPv4 Destination Address and mask
- TCP source port [min:max] range
- TCP destination port [min:max] range
- IPv4 protocol number and mask

---

## Licensing and Ordering

**Note:** Customers who pay a license fee for SDNet are then able to use the IP such as this CAM as they want for free.

For more information, visit the [SDNet Development Environment page](#).

# Product Specification

This chapter includes information about the performance, resource utilization, and the port descriptions of the TCAM.

The TCAM (see [Figure 2-1](#)) contains the following sub-blocks:

- Rule Database  
*Storage for rules and algorithmic lookup matching*
- Lookup Request FIFO  
*Buffering queue for input lookup requests*
- Update FSM  
*Rule database access management and FIFO dequeue control*
- Register Map  
*Configuration and status registers*
- AXI4-Lite interface slave  
*Protocol handling for accepting read/write requests and generating responses*

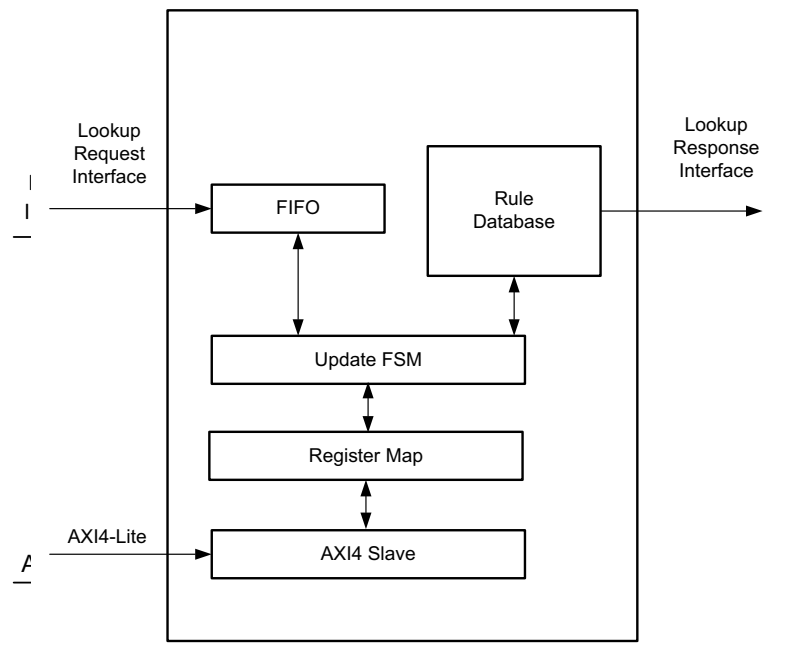


Figure 2-1: Block Diagram

X20008-110217

**Note:** FSM stands for Finite State Machine.

The rule database stores the {data, mask, value} entries and performs lookup matching. The block is fully-pipelined and can accept a new lookup request on each clock cycle. However when the rule database is being accessed by the API for reading or writing rules, the rule database is not available for lookup matching. In order to fully decouple the lookup interface from the API database management, the design uses a FIFO for buffering the input lookup requests while the database is not accessible during updates.

The duration of the update phase depends on the storage configuration option:

- For entries stored in distributed RAM: 33 clock cycles
- For entries stored in block RAM: 513 clock cycles

The Update FSM stops the de-queuing of the Lookup Request FIFO on a new API read/write request for the duration of the operation. The FIFO is sized to provide enough buffering in order not to overflow during the update operation. The Update FSM re-starts the lookup request dequeue operation after the completion of the update. The Update FSM will not schedule another update operation prior to the draining of the Lookup Request FIFO, which is guaranteed when the operating clock frequency exceeds the lookup request rate.

For example, for a 100 Gb/s Ethernet interface that has a maximum packet rate of 150 Mp/s, if each packet requires a single lookup in the TCAM, this corresponds to a minimum TCAM frequency of 150 MHz. A higher clock frequency allows for faster draining of the FIFO and increases the rate at which the TCAM can process the update requests from the API. The [Throughput](#) section shows the update rate calculation as a function of the difference between the clock frequency and the lookup rate.

---

## Performance

### Maximum Frequencies

The TCAM is designed to run at 170 MHz in Virtex®-7 -2 speed grade devices. Higher frequencies can be achieved depending on the configuration and the target device. See [Table 2-1](#).

### Latency

The TCAM latency depends on both the configuration and the fill level of the Lookup Request FIFO. The latency is constant when no updates requests are active and is shown in [Table 2-1](#) in terms of clock cycles.



Table 2-1: TCAM Latency

		Width (bits)				
		20	40	80	160	320
Depth	<=256	3	3	4	5	7
	512	4	4	6	8	12
	1024	6	6	10	14	22

**Note:** If updates are active, there is an additional latency due to the Lookup Request FIFO fill level, which can be between 0 and 33 cycles for a distributed RAM implementation and between 0 and 513 cycles for a block RAM implementation.

## Throughput

One new search request can be issued per cycle. The lookup and update throughput of the TCAM can be expressed as follows, assuming one lookup per packet.

The example frequency of 170 MHz is suggested for over-clocking beyond the required 150 MLPS search rate; this creates "bubble" cycles available for performing updates.

$$\text{Lookup Rate [M/s]} = \text{Clk Frequency [MHz]}$$

For distributed RAM:

- Update Rate [M/s] = (Clk Frequency [MHz] - Packet Rate [Mp/s]) / 33

For block Ram:

- Update Rate [M/s] = (Clk Frequency [MHz] - Packet Rate [Mp/s]) / 513

**Note:** The Clk Frequency [MHz] must be higher than the Packet Rate [Mp/s] to accommodate updates. With a clock frequency of 170 MHz, TCAM throughput for 100Gb/s Ethernet is shown in [Table 2-2](#).

Table 2-2: TCAM Throughput at Clk = 170 MHz

Memory	Lookup Rate (M/s)	Update Rate (K/s)
Distributed RAM	150	600
Block Ram	150	39

## Resource Utilization

### Virtex-7 Devices

Table 2-3 provides approximate resource counts for the various core options on Virtex®-7 devices.

Table 2-3: Device Resources and Maximum Frequency in Virtex-7 FPGAs

Parameter Values <sup>(1)</sup>	Device Resources				
Key width (K), Value width (V), Depth (D), block RAM (B), N_RANGE (R), RANGE_SIZE (S) RANGE_OFFSET (O)	Slices	LUTs	FFs	Block RAMs	Max Freq <sup>(2)</sup> (MHz)
K=64 V=16 D=256 B=0 R=0 S=X O=X	2562	8207	4459	2	173
K=128 V=16 D=512 B=0 R=1 S=16 O=0	12011	36434	35068	3	171
K=256 V=16 D=1024 B=0 R=2 S=16 O=0	44272	141674	138691	5	170

**Notes:**

1. See [Chapter 4](#) for a detailed description of the parameters.
2. Maximum frequency when targeting a -2 speed grade.

## Port Descriptions

The following parameters are a subset of the synthesis-time configuration parameters. They are listed here because they affect the bus width of some of the interface signals. A complete list of the synthesis-time configuration parameters is given in [Chapter 4](#).

## System Interface

Table 2-4: System Interface

Signal Name	Direction	Width	Description
Rst	Input	1	Synchronous active-high reset
Clk	Input	1	System clock

## Lookup Interface

The Lookup interface is used to issue search requests and receive the corresponding results.



**IMPORTANT:** SDNet exposes these ports through a wrapped interface as described in the SDNet Packet Processor User Guide (UG1012) [Ref 4].

Table 2-5: Lookup Interface

Signal Name	Direction	Width	Description
LookupReqValid	Input	1	Lookup Request Valid: When 1, indicates that LookupKey is valid.
LookupReqKey	Input	K	Lookup Request Key: Valid when LookupReqValid is asserted.
LookupRespValid	Output	1	Lookup Response Valid: Asserted after a variable number of clock cycles following the assertion of LookupReqValid to indicate that LookupRespMatch is valid.
LookupRespMatch	Output	1	Lookup Response Match: Indicates the input key is matching at least one entry in the TCAM. Valid when LookupRespValid = 1.
LookupRespKey	Output	K	Lookup Response Key: A copy of the key requested via LookupReqKey, valid when LookupRespValid=1.
LookupRespAddr	Output	Log2(D)	The address of the matching entry with the highest priority. Valid when LookupRespMatch = 1.
LookupRespValue	Output	V	Response Value: Outputs the value associated with the matching entry. Valid when LookupRespMatch = 1.

## AXI4-Lite Interface

The AXI4-Lite interface provides the register read/write interface for the CPU running the API software. Refer to the *AMBA AXI4-Stream Protocol Specification* [Ref 1] for the detailed description of the interface signals and the details of protocol operation.

Table 2-6: AXI4-Lite Interface

Signal Name	Direction	Width	Description
<b>AXI Global System Signals <sup>(1)</sup></b>			
S_AXI_ACLK	Input	1	AXI Clock
S_AXI_ARESETN	Input	-	AXI Reset, active-Low
<b>AXI Write Address Channel Signals <sup>(1)</sup></b>			
S_AXI_AWADDR	Input	32	AXI Write address. The write address bus gives the address of the write transaction.
S_AXI_AWVALID	Input	1	Write address valid. This signal indicates that valid write address and control information are available.
S_AXI_AWREADY	Output	1	Write address ready. This signal indicates that the slave is ready to accept an address and associated control signals.
<b>AXI Write Data Channel Signals <sup>(1)</sup></b>			
S_AXI_WDATA	Input	32	Write data
S_AXI_WSTB	Input	4	Write strobes. This signal indicates which byte lanes to update in memory. Note that individual byte masking is not supported. During a write, all four write strobe must be active.
S_AXI_WVALID	Input	1	Write valid. This signal indicates that valid write data and strobes are available.
S_AXI_WREADY	Output	1	Write ready. This signal indicates that the slave can accept the write data.
<b>AXI Write Response Channel Signals <sup>(1)</sup></b>			
S_AXI_BRESP	Output	2	Write response. This signal indicates the status of the write transaction. 00 - OKAY 10 - SLVERR
S_AXI_BVALID	Output	1	Write response valid. This signal indicates that a valid write response is available.
S_AXI_BREADY	Input	1	Response ready. This signal indicates that the master can accept the response information.

AXI Read Address Channel Signals <sup>(1)</sup>			
S_AXI_ARADDR	Input	32	Read address. The read address bus gives the address of a read transaction.
S_AXI_ARVALID <sup>(2)</sup>	Input	1	Read address valid. This signal indicates, when High, that the read address and control information is valid and will remain stable until the address acknowledgment signal, S_AXI_ARREADY, is High.
S_AXI_ARREADY	Output	1	Read address ready. This signal indicates that the slave is ready to accept an address and associated control signals.
AXI Read Data Channel Signals <sup>(1)</sup>			
S_AXI_RDATA	Output	32	Read data
S_AXI_RRESP	Output	2	Read response. This signal indicates the status of the read transfer.
S_AXI_RVALID	Output	1	Read valid. This signal indicates that the required read data is available and the read transfer can complete.
S_AXI_RREADY	Input	1	Read ready. This signal indicates that the master can accept the read data and response information.

**Notes:**

1. The function and timing of these signals is defined in the *Xilinx AMBA AXI4 Interface Protocol* page [Ref 3].
2. Read transactions have higher priority than write transactions.

## Register Space

The register space is used for software control, monitoring and management of the TCAM IP. This information is provided for reference; the provided API functions should be used for controlling the TCAM IP instead of accessing the register space directly. The register space is documented in relative offsets. During AXI system initialization, the TCAM IP is assigned an absolute memory address range.

Table 2-7: Offset = 0X00 Unique Device ID

Field name	Bits	Access	Description
Unique Device ID	31:0	Read-only	Unique Device ID. Used by the API functions to ensure compatibility.

Table 2-8: Offset = 0X40 Update Request

Field name	Bits	Access	Description
Operation	29:28	Read-write	<p>Writing this register offset triggers a new command request. The type of command is encoded in the value written into this field. Valid encodings are:</p> <ul style="list-style-type: none"> <li>• 00 = Verify the contents of the TCAM at the address referenced by the Addr field with Valid, Key, Mask and Value registers.</li> <li>• 01 = Write the contents of Valid, Data, Mask, and Value registers into the TCAM at the address referenced by the Addr field. To remove a specific entry from the TCAM, use this operation with Valid = 0.</li> <li>• 10 = Initialize the TCAM, erasing all the entries. This operation should be executed following a reset.</li> </ul>
Addr	15:0	Read-write	Controls the address being accessed by the read and write operations.

Table 2-9: Offset = 0X44:Update Response

Field name	Bits	Access	Description
UpdateAck	0	Read-only	<p>Acknowledge. This register is reset by hardware immediately upon detecting a write to the Update Request register.</p> <p>It is set by hardware after the Update Request is completed. Software should ensure that this register is set before scheduling a new request or reading the value register after an update command.</p>

Table 2-10: Offset - 0X4C: Valid

Field name	Bits	Access	Description
Valid	0	Read-write	<p>Indicates that the entry is valid.</p> <p>Loaded by software prior to issuing a write or verify operation. Not used for the initialization operation.</p>

The number of data/mask registers KN is equal to  $\text{ceil}(K / 32)$ .

Using integer division,  $KN = (K - 1) / 32 + 1$ .

Data registers occupy the offset range of  $[0x50: 0x50 + (KN*4) - 1]$ . Because K never exceeds 512, the maximum range of the data register offset is within  $[0x50:0x8F]$ .

Table 2-11: Offset = 0x50 + 4\*n: Data[n]

Field name	Bits	Access	Description
Data[n]	31:0	Read-write	Bits [max(K, 31+32*n): 32*n] of the data or a min portion of the numeric range for [min:max] comparison. Loaded by software prior to issuing a write or verify operation. Not used for the initialization operation.

Mask registers occupy the offset range of [0x90: 0x90 + (KN\*4) – 1]. Because K never exceeds 512, the maximum range of the mask register offset is within [0x90:0xCF].

Table 2-12: Offset = 0x90 + 4\*n: Mask[n]

Field name	Bits	Access	Description
Mask[n]	31:0	Read-write	Bits [max(K, 31+32*n): 32*n] of the mask, or a max portion of the numeric range for [min:max] comparison. Loaded by software prior to issuing a write or verify operation. Not used for the initialization operation.

The number of value registers VN is equal to ceil(V /32).

Using integer division,  $VN = (V - 1) / 32 + 1$ .

Value registers occupy the offset range of [0xD0: 0xD0 + (VN\*4) – 1]. Because V never exceeds 256, the maximum range of offset value register offsets is within [0xD0:0xEF].

Table 2-13: Offset = 0xD0 + 4\*N: Value[n]

Field name	Bits	Access	Description
Value[n]	31:0	Read-write	Bits [max(V, 31+32*n): 32*n] of the value. Loaded by software prior to issuing a write or verify operation. Not used for the initialization operation.

# Designing with the Core

This chapter includes guidelines and additional information to facilitate designing with the core.

---

## General Design Guidelines

### Implementation in Distributed RAM vs. Block RAM

Implementation in distributed RAM provides higher memory usage efficiency than in block Ram because distributed RAM has smaller granularity. However, if a particular design has more block RAM spare capacity in the target device, block RAM can be used even if it is less efficient than distributed RAM because it will provide better overall device utilization.

---

## Clocking

In general, the clock frequency should be higher than the packet rate to allow for background updates. See [Throughput in Chapter 2](#) for details.

---

## Resets

At startup, both the AXI reset and the main reset must be asserted simultaneously for 100 cycles of the slower of the two clocks (AXI clock and main clock). As long as the reset assertion time is met, either reset can be asserted or negated first.



---

## Protocol Description

### Interface Operation

This section describes the operation of the TCAM Lookup interface. The API functions are used for reading and writing the TCAM entries.

#### ***Reset and clock***

The TCAM operates the Lookup interface synchronously to the main clock. The clock period must satisfy the constraints described in [Throughput in Chapter 2](#).

The TCAM uses a synchronous active-High reset. Reset must have a minimum assertion pulse width of 100 cycles to fully clear internal pipelines. Reset does not have a maximum assertion time, and can be held asserted for any duration longer than minimum assertion time as required by other blocks in the system. Reset negation must meet setup timing relative to the rising edge of the clock.

The AXI4-Lite interface includes additional clock and reset inputs. Both the AXI reset and the main reset must be asserted simultaneously for 100 cycles of the slower of the two clocks (AXI clock and main clock.) As long as the reset assertion time is met, either reset can be asserted or negated first.

#### ***Lookup Interface***

The Lookup interface is used to check for the presence of a particular key in the TCAM data structure. If the key is present, the corresponding value is output.

The Lookup Interface is composed of two sub-interfaces: Lookup Request and Lookup Response. The Lookup Request interface is used by the application to drive the keys that need to be checked, and the Lookup response interface reports the presence of the keys and returns the corresponding addresses and values.

#### ***Lookup Request***

The Lookup Request interface is fully-pipelined and is able to process a lookup request every clock cycle. `LookupReqKey` must be valid when `LookupReqValid` is asserted and must contain the key being looked up (See [Appendix C](#)).

### Lookup Response

The Lookup Response interface reports the result of looking up the key scheduled on the Lookup Request interface. `LookupRespValid` is asserted with a variable latency with respect to `LookupReqValid`. See [Latency in Chapter 2](#) for a description of the latency calculation.

`LookupRespValid` is asserted for one cycle during which the `LookupRespKey` duplicates the value present on the `LookupReqKey` during the corresponding `LookupReqValid` assertion cycle. `LookupRespHit` is valid together with `LookupRespKey` and indicates the presence of `LookupReqKey` in the TCAM IP when asserted. When `LookupRespHit` is asserted, it also validates the `LookupRespValue` output, which contains the value portion of the {data, mask, value} entry stored in the TCAM. `LookupRespAddr` is also validated by the `LookupRespValid` and contains the address of the matching rule.

When `LookupRespHit` is negated, it means `LookupRespKey` was not found and the `LookupRespValue/LookupRespAddr` signals are invalid.

Figure 3-1 shows the timing waveforms of the Lookup Interface operation. The first and third lookup requests result in a miss. The second and fourth requests result in hits and output the corresponding values on the response interface.

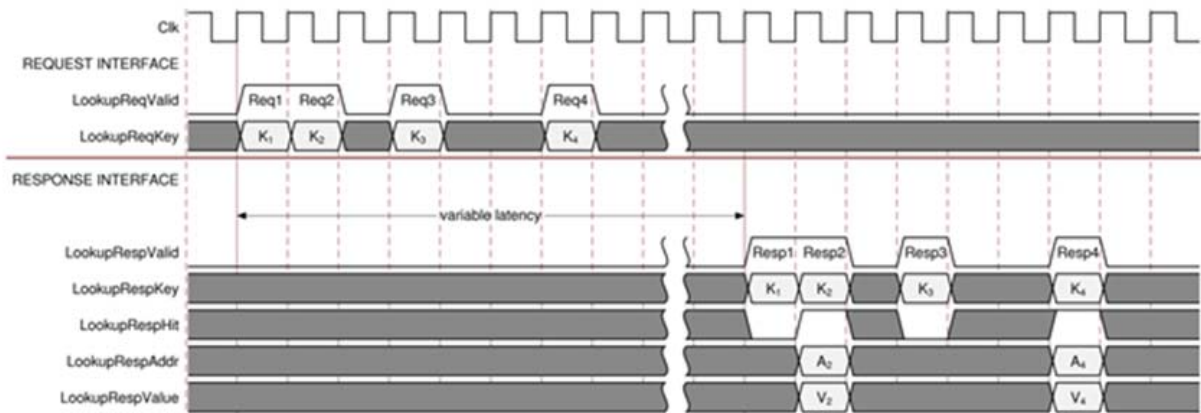


Figure 3-1: Lookup Interface Functional Timing Diagram

**Note:** If more than one entry matches the {data,mask} being looked up, the entry with the highest priority (lowest address) is output.

# Design Flow Steps

This chapter describes customizing and generating the core, constraining the core, and the simulation, synthesis and implementation steps that are specific to this IP core.

## Configuration

The TCAM design is highly configurable at compile time to make it suitable for a large variety of applications. Table 4-1 lists available configuration parameters. Note that changing parameters requires design synthesis and generation of a new FPGA bitstream.

Table 4-1: Configuration Parameters

Parameter Name	Valid Range	Description
K	1-512 bits	Key/Data/Mask width.
V	1-256 bits	Value width.
D	1-4096 entries	Maximum number of entries.
BRAM	0-1	Specify whether RAM is implemented using distributed RAM (0) or block Ram (1).
N_RANGE	0-2 ranges	Number of range comparisons.
RANGE_SIZE	2-16 bits	Width the range(s). If two range comparisons are configured, both will have the same width.
RANGE_OFFSET	$0 - (K - N\_RANGE * RANGE\_SIZE - 1)$	Bit offset of the first range in the key. A value of 0 places the Range1 MSB at bit 0 of the key. Both range bit fields must be adjacent, e.g., {KEY_MSBs, RANGE2, RANGE1, KEY_LSBs}.
INSTANCE_NAME	Text	Instance name used for the top level instance, e.g., "TCAM_1"
<b>Notes:</b>		
1. The range comparison feature for specifying up to two integer ranges is not enabled in the current version of SDNet. This feature will be enabled in a future version of SDNet.		

To configure the core properly for a given application, the following must be considered.

- K (Key width) must be equal to the number of bits in the search key.
- V (Value width) must be equal to the number of bits in the value associated with the key.
- D (Depth) must be equal to the number of keys that must be stored in the TCAM.

- BRAM must be set to 0 if using distributed RAM or 1 if using block RAM.
- N\_RANGE must be set to the number of range comparisons in the rules (1 or 2). It must be set to 0 if the rules do not include range comparisons.
- RANGE\_SIZE must be set to the width of the range(s) in the key, if any. Valid values must be between 2 and 16.
- RANGE\_OFFSET must be set to the bit position of the RANGE1 LSB in the key.

## Output Generation

Table 4-2 shows the files associated with the core.

Table 4-2: Core Files

File names	Description
<INSTANCE_NAME>/rtl/<INSTANCE_NAME>.v	Encrypted Verilog source code
<INSTANCE_NAME>/model/model.sv	Behavioral model of the TCAM
<INSTANCE_NAME>/sim/run.do	Questa Advanced Simulator command file
<INSTANCE_NAME>/tb/tb.sv	Demonstration test bench
<INSTANCE_NAME>/api/<INSTANCE_NAME>.h <INSTANCE_NAME>/api/xilinx_tcam.h <INSTANCE_NAME>/api/xilinx_tcam.c	Software driver files.

## Constraining the Core

This section contains information about constraining the core.

### Required Constraints

This section is not applicable for this IP core.

### Device, Package, and Speed Grade Selections

This section is not applicable for this IP core.

### Clock Frequencies

The design must contain a clock frequency constraint for the primary clock driving the C1k input of the TCAM. An example for constraining a primary clock net called clk170 that drives the C1k input at 170 MHz follows.

```
create_clock -period 5.882 -name clk170 get_ports clk1
```

## Clock Management

This section is not applicable for this IP core.

## Clock Placement

This section is not applicable for this IP core.

## Banking

This section is not applicable for this IP core.

## Transceiver Placement

This section is not applicable for this IP core.

## I/O Standard and Placement

This section is not applicable for this IP core.

---

## Simulation

For comprehensive information about Vivado simulation components, as well as information about using supported third-party tools, see the *Vivado Design Suite User Guide: Logic Simulation* (UG900) [Ref 4]. Please also refer to the *SDNet Packet Processor User Guide* (UG1012) [Ref 6].

---

**IMPORTANT:** For cores targeting 7 series or Zynq-7000 devices, UNIFAST libraries are not supported. Xilinx IP is tested and qualified with UNISIM libraries only.

---

---

## Synthesis and Implementation

For details about synthesis and implementation, see the *Vivado Design Suite User Guide: Designing with IP* (UG896) [Ref 5].

# Upgrading

This appendix is not applicable for the first release of the core.

# Debugging

This appendix includes details about resources available on the Xilinx Support website and debugging tools.

---

## Finding Help on Xilinx.com

To help in the design and debug process when using the TCAM, the [Xilinx Support web page](#) contains key resources such as product documentation, release notes, answer records, information about known issues, and links for obtaining further product support.

### Documentation

This product guide is the main document associated with the TCAM. This guide, along with documentation related to all products that aid in the design process, can be found on the [Xilinx Support web page](#) or by using the Xilinx® Documentation Navigator.

Download the Xilinx Documentation Navigator from the [Downloads page](#). For more information about this tool and the features available, open the online help after installation.

### Answer Records

Answer Records include information about commonly encountered problems, helpful information on how to resolve these problems, and any known issues with a Xilinx product. Answer Records are created and maintained daily ensuring that users have access to the most accurate information available.

Answer Records for this core can also be located by using the Search Support box on the main [Xilinx support web page](#). To maximize your search results, use proper keywords such as:

- Product name
- Tool message(s)
- Summary of the issue encountered

A filter search is available after results are returned to further target the results.

The Master Answer Record for this core is [AR 59718](#).

## Technical Support

Xilinx provides technical support at the [Xilinx Support web page](#) for this SmartCORE™ IP product when used as described in the product documentation. Xilinx cannot guarantee timing, functionality, or support if you do any of the following:

- Implement the solution in devices that are not defined in the documentation.
- Customize the solution beyond that allowed in the product documentation.
- Change any section of the design labeled DO NOT MODIFY.

To contact Xilinx Technical Support, navigate to the [Xilinx Support web page](#).

---

## Debug Tools

There are many tools available to address TCAM design issues. It is important to know which tools are useful for debugging various situations.

---

## Hardware Debug

Hardware issues can range from link bring-up to problems seen after hours of testing. This section provides debug steps for common issues.

### General Checks

Ensure that all the timing constraints for the core were properly incorporated and that all constraints were met during implementation.

- Does it work in post-place and route timing simulation? If problems are seen in hardware but not in timing simulation, this could indicate a PCB issue. Ensure that all clock sources are active and clean.
- If using mixed-mode clock managers (MMCMs) in the design, ensure that all MMCMs have obtained lock by monitoring the LOCKED port.
- If your outputs go to 0, check your licensing.



---

## Interface Debug

### AXI4-Lite Interfaces

Read from a register that does not have all 0s as a default to verify that the interface is functional. See the *Xilinx AMBA AXI4 Interface Protocol page [Ref 3]* for a read timing diagram. Output `s_axi_arready` asserts when the read address is valid, and output `s_axi_rvalid` asserts when the read data/response is valid. If the interface is unresponsive, ensure that the following conditions are met.

- The `s_axi_aclk` and `aclk` inputs are connected and toggling.
- The interface is not being held in reset, and `s_axi_areset` is an active-Low reset.
- The interface is enabled, and `s_axi_aclken` is active-High (if used).
- The main core clocks are toggling and that the enables are also asserted.

If the simulation has been run, verify in simulation that the waveform is correct for accessing the AXI4-Lite interface.

# Application Software Development

This appendix describes the Application Programming Interface (API) functions for the TCAM SmartCORE™ IP. The API functions provide an easy-to-use interface between the user application and the TCAM hardware control and status registers. The API functions are implemented in the C programming language and conform to the ISO/IEC 9899:1999 standard, which is commonly referred to as "C99".

The API library does not have any external dependencies and does not perform file access, I/O access, or memory allocation/deallocation.

In order to use the API functions, the user application includes the appropriate header file in the source code and calls the required functions. The API library is delivered as source code and can be compiled and linked together with the user application or as a separate static or dynamic library. The build system or the compilation scripts should ensure the correct setup of the 'include' and library paths.

The API is comprised of the following files.

- <INSTANCE\_NAME>.h – instance-specific macro definitions
- TCAM.h – API library header file
- TCAM.c – API library functions

## Data Structures

This section describes the data structures used by the TCAM API functions to interface with the user application.

### Device Context

```
typedef struct {
    uint32_t    max_depth;
    uint32_t    key_width;
    uint32_t    value_width;
    uint32_t    num_ranges;
    uint32_t    range_width;
    uint32_t    base;
    void(*register_write)(uint32_t addr, uint32_t data);
    uint32_t(*register_read)(uint32_t addr);
    int (*log_message)(const char * format, ...);
    uint32_t log_level;
} TCAM_CONTEXT;
```

The TCAM\_CONTEXT structure contains device context information used to uniquely refer to a TCAM instance and pointers to system utility functions used by the TCAM API functions. The system can contain multiple TCAM instances. Each TCAM instance must be initialized separately and assigned a unique TCAM\_CONTEXT data structure validated via the TCAM\_Init\_ValidateContext() API function call.

- *max\_depth* contains the maximum number of entries that can be stored in the TCAM.
- *key\_size* contains the width of the entry key in bits.
- *value\_size* contains the width of the entry value in bits.
- *num\_ranges* is the number of numeric min:max range subfields.
- *range\_width* is the width of the range subfields.
- *range\_offset* is the bit position of the LSB of the first numeric subfield within the key.
- *base* is the starting address of the memory-mapped address space allocated to the TCAM instance. The TCAM API functions will add the base address to an internal offset when calling the provided *register\_read* and *register\_write* function pointers.
- *register\_read* and *register\_write* function pointers provide platform-specific access to the device memory space and must be initialized by the user code to point to implemented function entry points.
- *log\_message* is a function pointer that provides the platform-specific wrapper for reporting an informational message for logging. The TCAM calls this function when an event occurs, passing a printf-formatted string argument, and a variadic list of arguments. Only %s, %d and %x format specifiers are used. The final string never exceeds 255 characters.

- *log\_level* sets the logging verbosity threshold using the following settings.
    - TCAM\_LOG\_DISABLE = 0  
No log messages are printed, *log\_message* can be NULL.
    - TCAM\_LOG\_ERROR  
*log\_message* is called for error messages.
    - TCAM\_LOG\_WARNING  
*log\_message* is called for warning and error messages.
    - TCAM\_LOG\_INFO  
*log\_message* is called for informational, warning, and error messages.
- 

## Device Initialization

The initialization API function provides constants and function for correct TCAM instance and software initialization.

### TCAM\_ADDR\_SIZE

This define specifies the size of the TCAM address space in bytes. Each TCAM instance must be allocated TCAM\_ADDR\_SIZE bytes in the system memory map of the configuration space. This define can be used to statically configure the memory map.

**Note:** TCAM\_ADDR\_SIZE is tied to the version of the API and might change in future versions of the TCAM.

### TCAM\_Init\_GetAddrSize()

This function returns the TCAM\_ADDR\_SIZE and can be called at runtime to dynamically allocate or resize the configuration memory mapping of the TCAM instance.

**Note:** TCAM\_ADDR\_SIZE is tied to the version of the API and might change in future versions of the TCAM.

#### Prototype

```
uint32_t TCAM_Init_GetAddrSize();
```

#### Arguments

N/A

**Return value**

An integer indicating the size of the memory space in bytes.

***TCAM\_Init\_ValidateContext()***

This function creates the instance context data structure.

**Prototype**

```
int TCAM_Init_ValidateContext(
    TCAM_CONTEXT* cx,
    uint32_t base,
    uint32_t size,
    uint32_t max_depth,
    uint32_t key_width,
    uint32_t value_width,
    uint32_t num_ranges,
    uint32_t range_width,
    uint32_t range_offset,
    void (*register_write)(uint32_t, uint32_t),
    uint32_t(*register_read)(uint32_t addr),
    int (*log_message)(const char *, ...),
    uint32_t log_level
);
```

**Arguments**

- *cx*. A pointer to the TCAM\_CONTEXT structure to be initialized.
- *base*. Starting offset of the configuration memory address range assigned to this TCAM instance.
- *size*. Size in bytes of the configuration memory address range assigned to this TCAM instance.

**Note:** Must be equal to or greater than TCAM\_ADDR\_SIZE.

- *max\_depth*. Maximum number of entries that can be stored in the TCAM.
- *key\_width*. Width of the entry key in bits.
- *value\_width*. Width of the entry value in bits.
- *num\_ranges*. Number of numeric [min:max] range sub-fields within the key.
- *range\_width*. Width of the numeric sub-fields.
- *range\_offset*. Bit position of the LSB of the first range sub-field within the key.
- *register\_write*. Pointer to the register write function.
- *register\_read*. Pointer to the register read function.
- *log\_message*. Pointer to the formatted output log function.
- *log\_level*. Verbosity level.

**Return value**

An integer indicating success or an error code. Zero (TCAM\_SUCCESS) indicates successful firmware image loading and activation. A non-zero value indicates an error. See the list of TCAM error codes for details.

***TCAM\_Init\_SetLogLevel()***

This function updates the logging level in the device context data structure.

**Prototype**

```
int TCAM_Init_SetLogLevel(TCAM_CONTEXT* cx, uint32 log_level);
```

**Arguments**

- *cx*. A pointer to the TCAM\_CONTEXT structure to be updated.
- *log\_level*. A new logging level.

**Return value**

An integer indicating success or an error code. Zero (TCAM\_SUCCESS) indicates successful firmware image loading and activation. Non-zero value indicates an error. See the list of TCAM error codes for details.

***TCAM\_Init\_Activate()***

This function performs device self-initialization, erasing and invalidating all stored rules.

**Prototype**

```
int TCAM_Init_Activate(TCAM_CONTEXT* cx);
```

**Arguments**

- *cx*. A pointer to the TCAM\_CONTEXT structure.

**Return value**

An integer indicating success or an error code. Zero (TCAM\_SUCCESS) indicates successful device initialization and activation. A non-zero value indicates an error. See the list of TCAM error codes for details.

## Device Management API Functions

This API function provides a set of functions for inserting and removing TCAM rules and for configuring operational parameters.

### ***TCAM\_Mgt\_WriteEntry()***

This function writes a valid entry into the TCAM.

#### **Prototype**

```
int TCAM_Mgt_WriteEntry(TCAM_CONTEXT* cx, uint_32 addr, char* data, char* mask, char* value);
```

#### **Arguments**

- *cx*. A pointer to the TCAM\_CONTEXT structure.
- *addr*. TCAM location to overwrite.
- *data*. A pointer to a null-terminated C string encoding the key in hexadecimal.
- *mask*. A pointer to a null-terminated C string encoding the mask in hexadecimal.
- *value*. A pointer to a null-terminated C string encoding the value in hexadecimal.

#### **Return value**

An integer indicating success or an error code. Zero (TCAM\_SUCCESS) indicates successful key insertion or in-place update. A non-zero value indicates an error. See the list of TCAM error codes for details.

### ***TCAM\_Mgt\_EraseEntry()***

This function invalidates an entry in the TCAM.

#### **Prototype**

```
int TCAM_Mgt_EraseEntry (TCAM_CONTEXT* cx, uint32_t addr);
```

#### **Arguments**

- *cx*. A pointer to the TCAM\_CONTEXT structure
- *addr*. TCAM location to overwrite.

### Return value

An integer indicating success or an error code. Zero (TCAM\_SUCCESS) indicates successful key deletion. A non-zero value indicates an error. See the list of TCAM error codes for details.

### ***TCAM\_Mgt\_VerifyEntry()***

This function performs a “verify” operation for an entry.

### Prototype

```
int TCAM_Mgt_VerifyEntry(TCAM_CONTEXT* cx, uint_32 addr,
char* data, char* mask, char* value);
```

### Arguments

- *cx*. A pointer to the TCAM\_CONTEXT structure.
- *addr*. TCAM location to verify.
- *data*. A pointer to a null-terminated C string encoding the key in hexadecimal.
- *mask*. A pointer to a null-terminated C string encoding the mask in hexadecimal.
- *value*. A pointer to a null-terminated C string encoding the value in hexadecimal.

### Return value

An integer indicating success or an error code. Zero (TCAM\_SUCCESS) indicates successful key verification. A non-zero value indicates an error. See the list of TCAM error codes for details.

## Errors

This section details the error conditions, error code values, and the utility functions.

### ***TCAM\_Error\_Decode()***

This function provides the runtime description of each error code.

### Prototype

```
const char* TCAM_Error_Decode( int error);
```

### Arguments

*error*. A non-zero error code returned by the TCAM API function.



## Return value

Null-terminated string pointer containing a short description of the error code.

## Error Codes

- TCAM\_SUCCESS = 0  
Successful completion of the operation. The value of this code is zero and is guaranteed to be fixed in all future versions of the API.
- TCAM\_ERROR\_INIT\_SIZE  
The size argument is not less than TCAM\_ADDR\_SIZE.
- TCAM\_ERROR\_INIT\_NULL\_FUNCPTR:  
*register\_write*, *register\_read*, or *log\_message* function pointer is NULL.
- TCAM\_ERROR\_INIT\_READ\_MISMATCH  
Register reads to TCAM instance did not return the expected data written via register writes.
- TCAM\_ERROR\_INIT\_LOG  
*log\_message* did not return the expected number of arguments on output of init messages.
- TCAM\_ERROR\_NULL\_CONTEXT\_PTR  
Context pointer is NULL.
- TCAM\_ERROR\_INVALID\_CONTEXT  
Context magic number mismatch.
- TCAM\_ERROR\_INIT\_SIZE  
Context size too small for this instance.
- TCAM\_ERROR\_KEY\_NULL  
Key string pointer is NULL.
- TCAM\_ERROR\_VALUE\_NULL  
Value string pointer is NULL.
- TCAM\_ERROR\_KEY\_FORMAT  
Invalid key string format.
- TCAM\_ERROR\_VALUE\_FORMAT  
Invalid value string format.
- TCAM\_ERROR\_MASK\_NULL  
Mask string pointer is NULL.
- TCAM\_ERROR\_MASK\_FORMAT  
Invalid mask string format.
- TCAM\_ERROR\_VERIFY\_NO\_MATCH  
Entry verification failed (did not match).
- TCAM\_ERROR\_ACC  
Miscellaneous device access error.

# Additional Resources and Legal Notices

---

## Xilinx Resources

For support resources such as Answers, Documentation, Downloads, and Forums, see [Xilinx Support](#).

---

## Documentation Navigator and Design Hubs

Xilinx® Documentation Navigator provides access to Xilinx documents, videos, and support resources, which you can filter and search to find information. To open the Xilinx Documentation Navigator (DocNav):

- On Windows, select **Start > All Programs > Xilinx Design Tools > DocNav**.
- At the Linux command prompt, enter `docnav`.

Xilinx Design Hubs provide links to documentation organized by design tasks and other topics, which you can use to learn key concepts and address frequently asked questions. To access the Design Hubs:

- In the Xilinx® Documentation Navigator, click the **Design Hubs View** tab.
- On the Xilinx website, see the [Design Hubs](#) page.

**Note:** For more information on Documentation Navigator, see the [Documentation Navigator](#) page on the Xilinx website.

## References

These documents provide supplemental material useful with this product guide:

1. [AMBA AXI4-Stream Protocol Specification](#)
2. [Xilinx AMBA AXI4 Interface Protocol page](#)
3. PCI-SIG Documentation ([www.pcisig.com/specifications](http://www.pcisig.com/specifications))
  - *PCI Express Base Specification 1.1*
  - *PCI Express Card Electromechanical (CEM) Specification 1.1*
4. *Vivado Design Suite User Guide: Logic Simulation (UG90)*
5. *Vivado Design Suite User Guide: Designing with IP (UG896)*
6. *SDNet Packet Processor User Guide (UG1012)*

## Revision History

The following table shows the revision history for this document.

Date	Version	Revision
11/10/2017	1.0	Initial public release. The document title has been changed from <i>Ternary Content Addressable Memory SmartCORE IP</i> to <i>Ternary Content Addressable Memory (TCAM) Search IP for SDNet SmartCORE IP Product Guide</i> .

## Notice of Disclaimer

The information disclosed to you hereunder (the "Materials") is provided solely for the selection and use of Xilinx products. To the maximum extent permitted by applicable law: (1) Materials are made available "AS IS" and with all faults, Xilinx hereby DISCLAIMS ALL WARRANTIES AND CONDITIONS, EXPRESS, IMPLIED, OR STATUTORY, INCLUDING BUT NOT LIMITED TO WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT, OR FITNESS FOR ANY PARTICULAR PURPOSE; and (2) Xilinx shall not be liable (whether in contract or tort, including negligence, or under any other theory of liability) for any loss or damage of any kind or nature related to, arising under, or in connection with, the Materials (including your use of the Materials), including for any direct, indirect, special, incidental, or consequential loss or damage (including loss of data, profits, goodwill, or any type of loss or damage suffered as a result of any action brought by a third party) even if such damage or loss was reasonably foreseeable or Xilinx had been advised of the possibility of the same. Xilinx assumes no obligation to correct any errors contained in the Materials or to notify you of updates to the Materials or to product specifications. You may not reproduce, modify, distribute, or publicly display the Materials without prior written consent. Certain products are subject to the terms and conditions of Xilinx's limited warranty, please refer to Xilinx's Terms of Sale which can be viewed at <https://www.xilinx.com/legal.htm#tos>; IP cores may be subject to warranty and support terms contained in a license issued to you by Xilinx. Xilinx products are not designed or intended to be fail-safe or for use in any application requiring fail-safe performance; you assume sole risk and liability for use of Xilinx products in such critical applications, please refer to Xilinx's Terms of Sale which can be viewed at <https://www.xilinx.com/legal.htm#tos>.

### **AUTOMOTIVE APPLICATIONS DISCLAIMER**

AUTOMOTIVE PRODUCTS (IDENTIFIED AS "XA" IN THE PART NUMBER) ARE NOT WARRANTED FOR USE IN THE DEPLOYMENT OF AIRBAGS OR FOR USE IN APPLICATIONS THAT AFFECT CONTROL OF A VEHICLE ("SAFETY APPLICATION") UNLESS THERE IS A SAFETY CONCEPT OR REDUNDANCY FEATURE CONSISTENT WITH THE ISO 26262 AUTOMOTIVE SAFETY STANDARD ("SAFETY DESIGN"). CUSTOMER SHALL, PRIOR TO USING OR DISTRIBUTING ANY SYSTEMS THAT INCORPORATE PRODUCTS, THOROUGHLY TEST SUCH SYSTEMS FOR SAFETY PURPOSES. USE OF PRODUCTS IN A SAFETY APPLICATION WITHOUT A SAFETY DESIGN IS FULLY AT THE RISK OF CUSTOMER, SUBJECT ONLY TO APPLICABLE LAWS AND REGULATIONS GOVERNING LIMITATIONS ON PRODUCT LIABILITY.

© Copyright 2013 - 2017 Xilinx, Inc. Xilinx, the Xilinx logo, Artix, ISE, Kintex, Spartan, Virtex, Vivado, Zynq, and other designated brands included herein are trademarks of Xilinx in the United States and other countries. All other trademarks are the property of their respective owners.